

GN01-A1

Datasheet

Issue 1.5



Copyright © Neoway Technology Co., Ltd 2022. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Neoway Technology Co., Ltd.

neoway有方 is the trademark of Neoway Technology Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

This document provides guide for users to use GN01-A1.

This document is intended for system engineers (SEs), development engineers, and test engineers.

THIS GUIDE PROVIDES INSTRUCTIONS FOR CUSTOMERS TO DESIGN THEIR APPLICATIONS. PLEASE FOLLOW THE RULES AND PARAMETERS IN THIS GUIDE TO DESIGN AND COMMISSION. NEOWAY WILL NOT TAKE ANY RESPONSIBILITY OF BODILY HURT OR ASSET LOSS CAUSED BY IMPROPER OPERATIONS.

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE DUE TO PRODUCT VERSION UPDATE OR OTHER REASONS.

EVERY EFFORT HAS BEEN MADE IN PREPARATION OF THIS DOCUMENT TO ENSURE ACCURACY OF THE CONTENTS, BUT ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS DOCUMENT DO NOT CONSTITUTE A WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.

Contents

1 Overview	8
1.1 Introduction	8
1.2 Features	8
1.3 Specifications	9
1.3.1 GNSS reception.....	10
1.4 Block Diagram	10
2 Application Interfaces	11
2.1 Pin Definition	11
2.1.1 Pin assignment.....	11
2.1.2 Pin description	11
2.2 Power Management	13
2.2.1 Full on mode.....	13
2.2.2 Backup mode.....	13
2.3 RESET	14
2.4 BOOT	14
2.5 UART.....	14
2.6 PPS	15
2.7 3D_FIX	15
2.8 JAM_IND	15
2.9 AADET_N.....	15
2.10 GEO_FENCE interface	15
2.11 ANT_EXT (External Antenna)	15
3 Electrical Characteristics	17
3.1 Absolute Maximum Ratings.....	17
3.2 Operating Conditions	17
3.3 Power Consumption.....	17
4 Minimal Design	18
5 Mechanical Specifications	19
5.1 Mechanical Dimensions	19
5.2 Recommended PCB	19

Table of Figures

Figure 1-1 GN01-A1	8
Figure 1-2 Block diagram	10
Figure 2-1 Pin assignment	11
Figure 2-2 Power input reference circuit	13
Figure 2-3 External antenna reference design.....	16
Figure 4-1 Minimal application reference	18
Figure 5-1 Mechanical dimensions	19
Figure 5-2 PCB footprints.....	19

Table of Tables

Table 1-1 Specifications	9
Table1-2 GNSS reception	10
Table 2-1 Pin description	11
Table 3-1 Absolute maximum ratings	17
Table 3-2 Operating conditions	17
Table 3-3 Power consumption	17

About This Document

Scope

This document defines Neoway GN01-A1 GNSS positioning module. It describes the hardware interfaces, electrical and mechanical specifications, aiming to make audiences understand the hardware design of GN01-A1.




Audience

This document is intended for [system engineers \(SEs\)](#), [development engineers](#), and [test engineers](#).

Change History

Issue	Date	Change	Changed By
1.0	2020-06	First released	Vita Wu
1.1	2020-11	Adds minimal design in Chapter 4	Vita Wu
1.2	2021-02	Updates product photo	Vita Wu
1.3	2022-06	Modifies default baud rate Deletes I2C interfaces Content optimization	Cao Min
1.4	2022-07	Updates product image Modifies block diagram Removes an ESD part from Figure 2-2 Modifies mechanical dimensions Updates PCB footprints Updates power consumption in Table 1-1 and Table 3-3	Cao Min
1.5	2023-02	Content optimization	Cao Min

Conventions

Symbol	Indication
	Indicates danger or warning. This information must be followed. Otherwise, a catastrophic module or user device failure or bodily injury may occur.
	Indicates caution. This symbol alerts the user to important points about using the module. If these points are not followed, the module or user device may fail.
	Indicates instructions or tips. This symbol provides advices or suggestions that may be useful when using the module.

1 Overview

1.1 Introduction

GN01-A1 is a high-performance dual-band (L1/L5) GNSS positioning module. It supports the global civil navigation systems, including GPS, NavIC, BDS, GLONASS, Galileo, and QZSS.

Embedded antennas ensure GN01-A1 to work at L1 and L5 bands simultaneously to increase the number of visible satellites assisting by GPS, BDS, Galileo, and NavIC signals, which makes this module achieve high positioning accuracy and short TTFF, especially in a rough urban environment. GN01-A1 supports external active antenna featured with auto-detecting and auto-switching. With a compact body and high performance, GN01-A1 is widely applied to tracking applications, like the automotive, consumer, and industrial tracking.

Figure 1-1 GN01-A1



1.2 Features

- Supports GPS, BDS, NavIC, Galileo and QZSS systems covering L1 and L5 bands
- Supports AGPS/DGPS/SBAS (WAAS/EGNOS/MSAS/GAGAN)
- Built-in LNA & SAW for better sensitivity
- Integrated with dual-feed (L1&L5) antenna
- Supports Geo-Fence function
- Supports message broadcast service for NavIC*
- Ultra-low power consumption around 50 mA in dual-band tracking mode
- Supports external active antenna featured with auto-detecting and auto-switching
- Compact size: 26.7*18.5*7.0 mm



*Supported by specific firmware upgrade

1.3 Specifications

Table 1-1 Specifications

Parameter	Specification
Positioning accuracy	GNSS: <1m CEP @ Open Sky
Velocity & Time Accuracy	GNSS 0.1 m/s CEP
	PPS_1 σ 20 ns
Time to First Fix (TTFF)	Hot start 1s
	Cold start 30s
Sensitivity	Cold start -149 dBm
	Reacquisition -158 dBm
	Tracking -162 dBm
Operating Limit	Velocity 515 m/s
	Altitude 18,000m
Interface	UART Adjustable: 9600-460800 bps; Default: 9600 bps Update Rate: 1 Hz (Default), up to 10 Hz
Protocol	NMEA 0183 V4.10
External Antenna Interface	Antenna Type: Active
	Antenna Power Supply: GN01-A1 Module (Pin 15)
Power Supply	VDD: 3.1-5.0 V, Typical 3.3V
	VDD_BAK: 1.7-3.6 V, Typical 3.3V
Power consumption	Operating mode (GPS+QZSS+BDS+Galileo+NavIC) Acquisition: 52 mA @ 3.3V Tracking: 50 mA @ 3.3V
	Backup mode 12 μ A @ 3.3V
	Operation temperature: -40°C to +85°C
Temperature	Storage temperature: -40°C to +85°C
Dimensions	26.7*18.5*7.0 mm
Weight	Approx. 8.5g


1.3.1 GNSS reception

Table1-2 GNSS reception

P/N	Option	GPS/QZSS		BDS		GLONASS	Galileo		NavIC
		L1C/A	L5C	B1I	B2a	L1	E1	E5a	L5
GN01-A1	A (Default)	●	●	●	●	-	●	●	●
	B	●	●	-	-	●	●	●	●
	C	●	●	-	-	-	-	-	●

1.4 Block Diagram

Figure 1-2 Block diagram

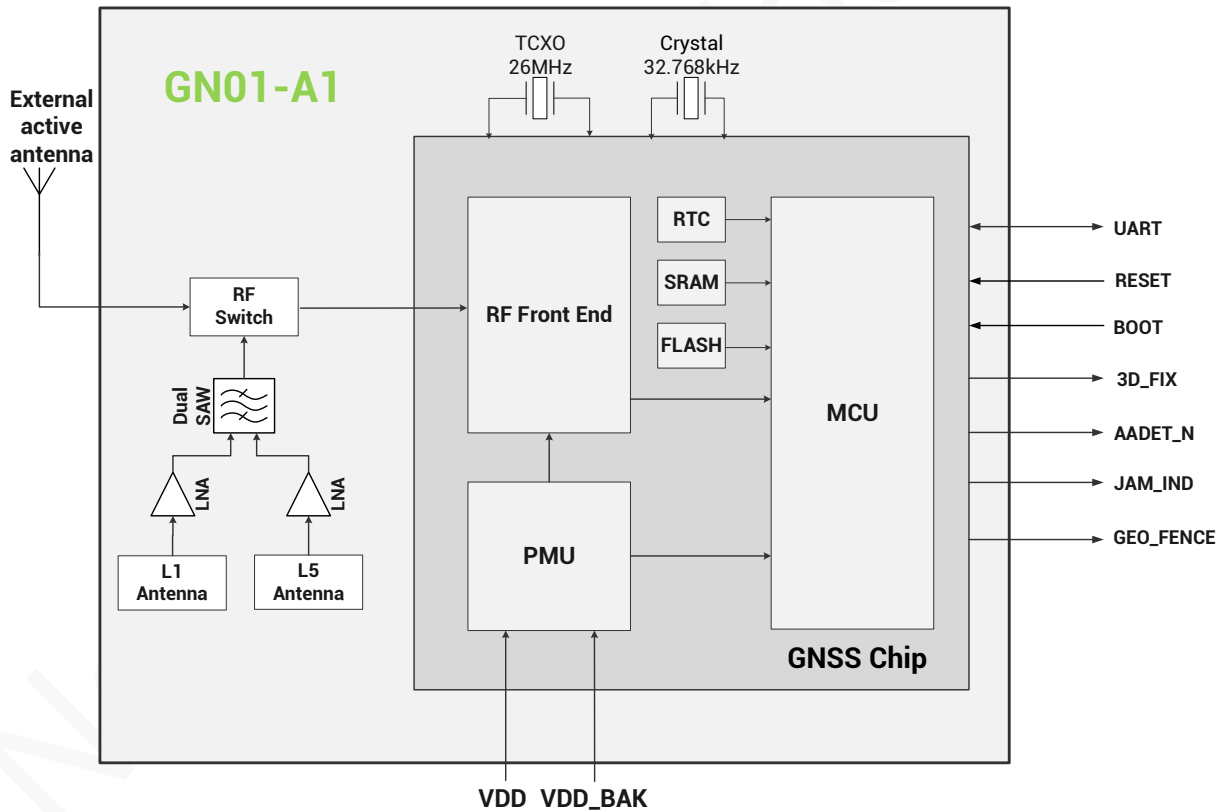


2 Application Interfaces

2.1 Pin Definition

2.1.1 Pin assignment

Figure 2-1 Pin assignment

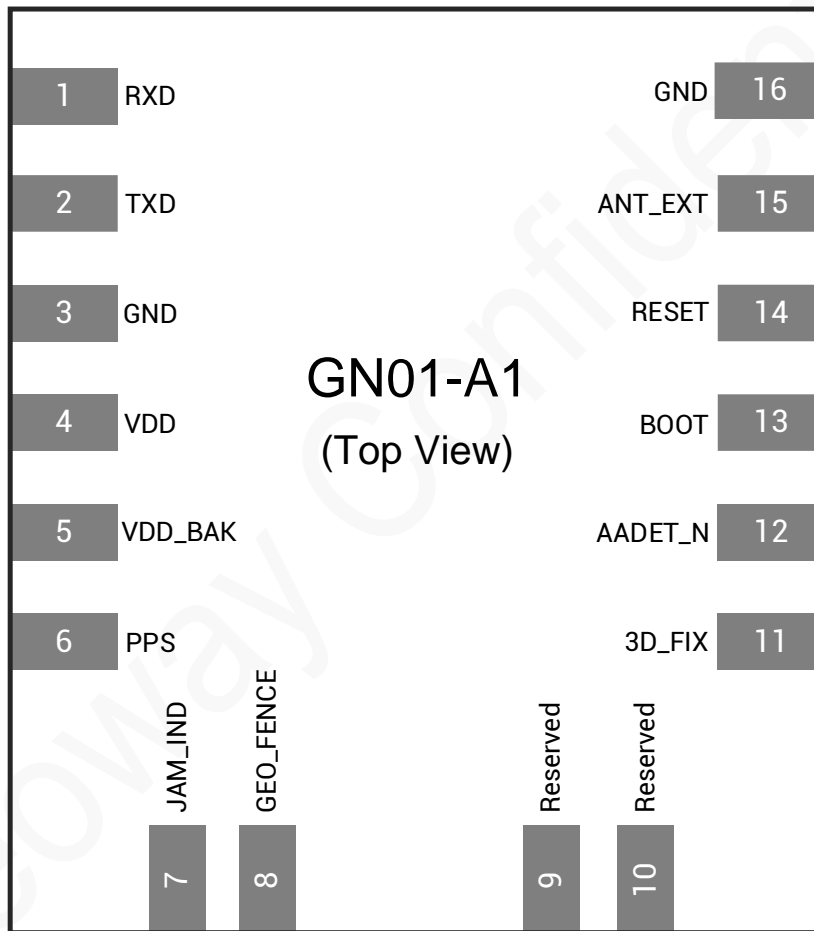

2.1.2 Pin description

Table 2-1 Pin description

Pin name	Pin No.	I/O	DC characteristics	Comment
RXD	1	I	V_{IL} min = 0V V_{IL} max = 0.4V V_{IH} min = 2.6V V_{IH} max = 3.6V	UART port is used for NMEA output, and firmware upgrade.

TXD	2	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	
GND	3, 16	VSS		Assure a good GND connection to all GND pins of the module, preferably with a large ground plane.
VDD	4	Power	$V_{\text{max}} = 5V$ $V_{\text{min}} = 3.1V$ $V_{\text{nom}} = 3.3V$	Main voltage supply. Provide clean and stable supply. Assure that the load current is not less than 150 mA.
VDD_BAK	5	Power	$V_{\text{max}} = 3.6V$ $V_{\text{min}} = 1.7V$ $V_{\text{nom}} = 3.3V$	Backup power supply voltage input. Backup power is needed in order to enable warm start and hot start features.
PPS	6	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	Time pulse output. If not used, keep it floating.
JAM_IND	7	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	Jamming detection indicator. If not used, keep it floating.
GEO_FENCE	8	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	Geo-fence boundary indicator. If not used, keep it floating.
3D_FIX	11	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	3D fix indicator. The pin is at high level by default. After 3d-fix, the pin turns to low level. If not used, keep it floating.
AADET_N	12	O	$V_{OL} \text{ max} = 0.4V$ $V_{OH} \text{ min} = 2.6V$ $V_{OH} \text{ nom} = 3.0V$	Active antenna Indicator. If not used, keep it floating.
BOOT	13	I	$V_{IL} \text{ min} = 0V$ $V_{IL} \text{ max} = 0.4V$ $V_{IH} \text{ min} = 2.6V$ $V_{IH} \text{ nom} = 3.3V$	Mode selection. Keep it floating or Hi-Z when system powers up or resets, and the module enters into full on mode; keep low level when system powers up or resets, and the module enters into BOOT mode.
RESET	14	I	$V_{IL} \text{ min} = 0V$ $V_{IL} \text{ max} = 0.4V$ $V_{IH} \text{ min} = 2.6V$ $V_{IH} \text{ nom} = 3.3V$	External reset, low active.
ANT_EXT	15	I		External active antenna pin
Reserved	9, 10	-		Reserved pins.

2.2 Power Management


GN01-A1 has two kinds of power supply: VDD and VDD_BAK. The main power is supplied through VDD pin, and the backup power is supplied through VDD_BAK. For a better positioning performance, it is recommended to use an LDO with 150 mA current at least.

VDD_BAK supplies power for RTC domain. If the VDD is off, VDD_BAK will be activated to keep the orbit information for a quick startup (hot start) and a shorter TTFF.



If no backup power supply, VDD will supply to VDD_BAK through a diode.

Figure 2-2 Power input reference circuit

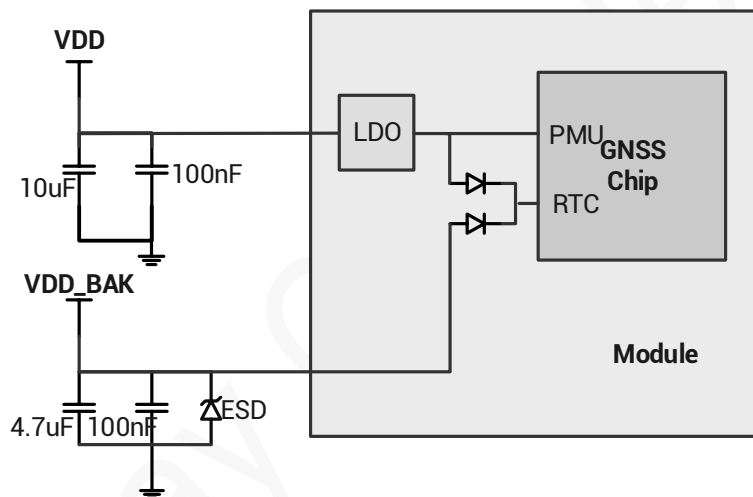

2.2.1 Full on mode

Full on mode consists of tracking mode and acquisition mode. In acquisition mode, the module searches satellites, and determines the visible satellites, coarse carrier frequency as well as code phase of satellite signals. Once the acquisition completed, it will automatically switch to tracking mode. In tracking mode, the module tracks satellites and demodulates the navigation data from specific satellites.

Both VDD and VDD_BAK pins are valid or only VDD is valid, the module enters into full on mode automatically.

2.2.2 Backup mode

If the power for VDD pin is off, the real-time clock (RTC) and battery backed RAM (BBR) are supplied through the VDD_BAK pin, and the module will enter into backup mode automatically. In backup mode, acquiring and tracking stops, and UART is not accessible. But orbit information and time will be maintained and allows a Hot or Warm start. Two ways to enter backup mode as below:

- Cut off VDD supply and keep VDD_BAK supply, and backup mode will be activated automatically. Reconnect the VDD supply, the module wakes the full on mode up.
- Send "\$PHD,06,41,TN,BB,<duration>,3*xx" command to enter into backup mode. After the specific duration, the module wakes the full on mode up.

For example:

*Send "\$PHD,06,41,TN,BB,60000,3*40" command, and the system keeps backup mode for 60000 ms. After 60000 ms, the module turns to full on mode.*

2.3 RESET

Reset pin is used to reset system. GN01-A1 module can be reset by driving RESET to low level voltage. Keep RESET pin floating if not used. Do not reserve any pull-up or pull-down circuit for this pin.

2.4 BOOT

Boot pin is used to upgrade the module. Keep BOOT pin Hi-Z or floating during an external reset or system power-on, the module enters full on mode.

How to enter the Boot mode?

Drive **BOOT** pin to low or connect **BOOT** pin to GND directly (not by pull-down resistance) during system powers up or the external reset happens. The system enters Boot mode after **BOOT** pin is released from low to floating state.



Do not reserve any pull-up or pull-down circuit for this pin.

2.5 UART

The Universal Asynchronous Receiver/Transmitter (UART) provides serial communication with external device. It performs serial-to-parallel & parallel-to-serial data conversion during receiving & transmitting respectively.

- UART port is used for NMEA output and firmware upgrade
- Range: 9600-460800 bps, the default baud rate is 9600 bps.

2.6 PPS

An extremely accurate time pulse signal “Pulse Per Second” (PPS) generated by GNSS can be output to designated pin. It is useful in timing applications. The pulse interval can be adjusted by changing internal parameters.

2.7 3D_FIX

3D_FIX defaults high level. It will output a low level after successful positioning.

2.8 JAM_IND

JAM_IND is used to detect if there is any jammer interfering the device. If a jammer interference exists, JAM_IND pin will produce a low level; otherwise it produces a high level.

2.9 AADET_N

AADET_N pin is used to detect whether there is an external active antenna. It outputs a low level if an external active antenna is detected; a high level if no external active antenna is detected. Keep AADET_N pin floating if not used.



- 1) Active antenna requires a DC supply through Pin 15 (ANT_EXT pin).
 - 2) The current supplying to active antenna should be in the range of 2 mA to 35 mA. Any current out of the range cannot indicate an active antenna status.
-

2.10 GEO_FENCE interface


The GEO_FENCE signal is used for geo-fence boundary indication. If not used, keep it floating.

2.11 ANT_EXT (External Antenna)

ANT_EXT pin is designed for an external active antenna connection. When an external active antenna is connected, GN01-A1 can automatically detect its presence and automatically switch to use it.

Recommended circuit design for an external antenna:

Figure 2-3 External antenna reference design

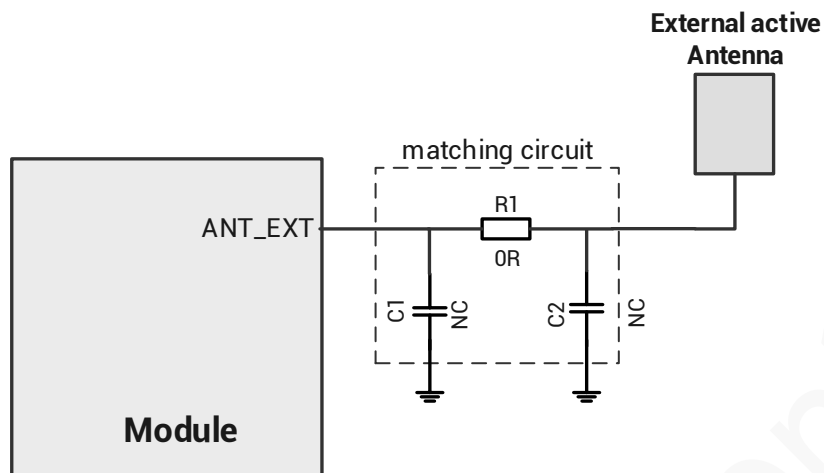

- 1) Active antenna requires a DC supply through Pin 15 (ANT_EXT pin).
- 2) The current supplying to active antenna should be in the range of 2 mA to 35 mA.

3 Electrical Characteristics

3.1 Absolute Maximum Ratings

This product contains devices to protect the inputs from high static voltages damage, however it is advisable to take normal precautions to avoid application of any voltage higher than the specified maximum rated voltages. Stresses above those listed under “Absolute Maximum Ratings” may cause permanent damage to the device.

Table 3-1 Absolute maximum ratings

Symbol	Parameter	Min.	Max.	Unit
VDD	Power input for the main power domain	-0.3	6	V
VDD_BAK	Backup supply	-0.5	3.63	V
I/O pin voltage	I/O pin voltage	-0.5	3.63	V
P _{ANT_EXT}	Input power at external antenna		15	dBm
T _{storage}	Storage temperature	-40	+85	°C

3.2 Operating Conditions

Table 3-2 Operating conditions

Symbol	Parameter	Min.	Typ.	Max.	Unit
VDD	Power input for the main power domain	3.1	3.3	5.0	V
VDD_BAK	Backup supply	1.7	3.3	3.6	V
ICC _{max}	Maximum operating current @ VDD			60	mA
T _{env}	Operating temperature	-40	+25	+85	°C

3.3 Power Consumption


Table 3-3 Power consumption

Module	Condition	Acquisition	Tracking	Backup
GN01-A1	(GPS+QZSS+BDS+Galileo+NavIC) @ 3.3V	52 mA	50 mA	12 uA

4 Minimal Design

Minimal design for GN01-A1 shows as below.


Figure 4-1 Minimal application reference

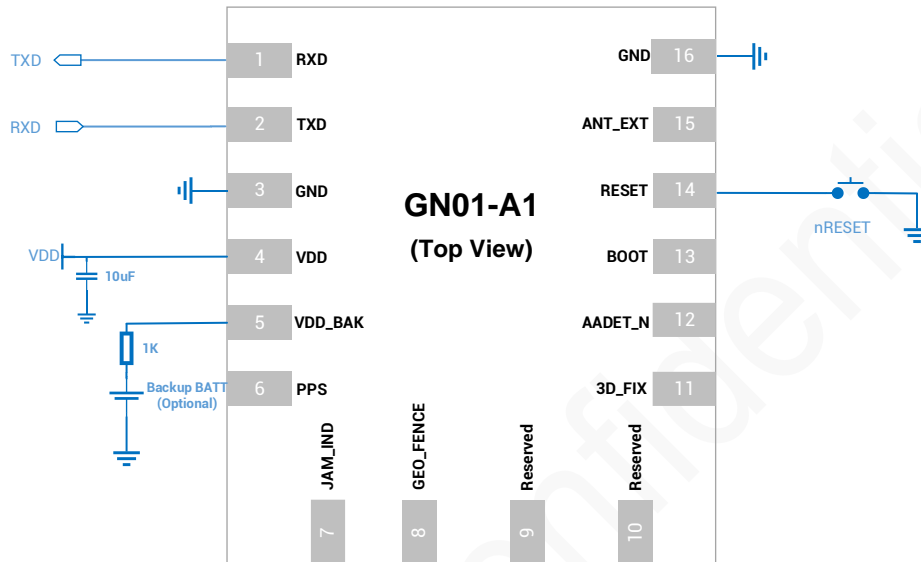

5 Mechanical Specifications

5.1 Mechanical Dimensions

Figure 5-1 Mechanical dimensions

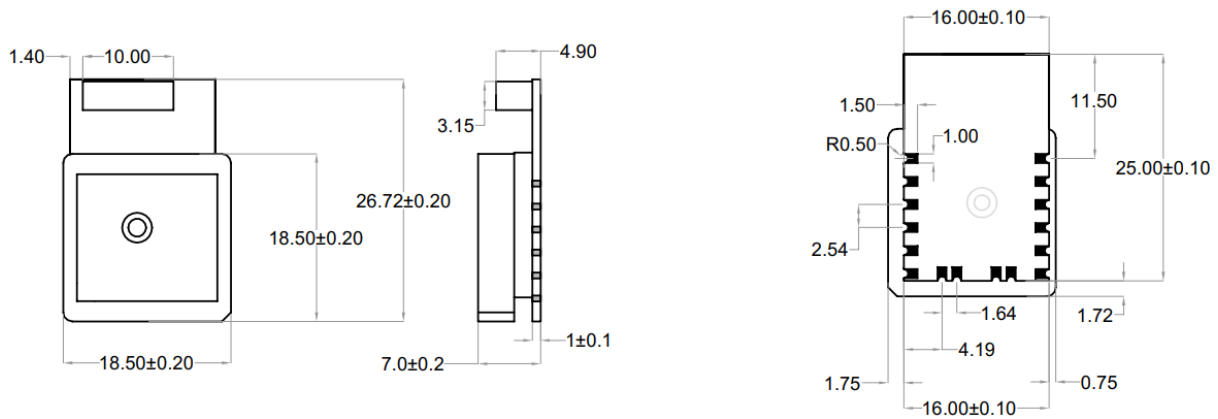

5.2 Recommended PCB

Figure 5-2 PCB footprints

